


HONDA SHADOW VLX 600 REAR AXLE BRACKETS INSTALLED


RIGHT REAR AXLE BRACKET

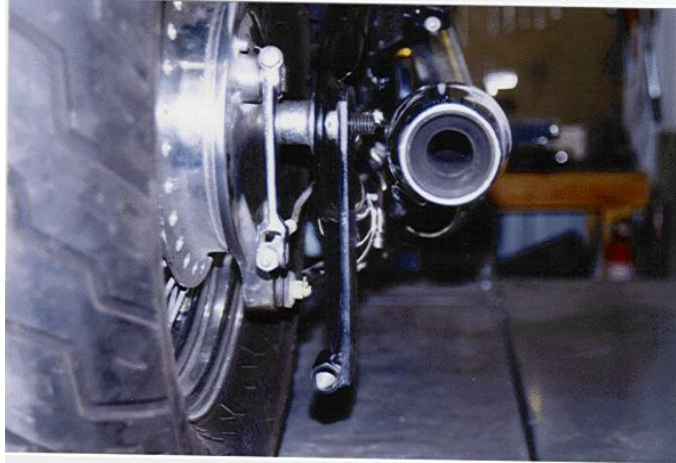

RIGHT REAR AXLE BRACKET




LEFT REAR AXLE BRACKET

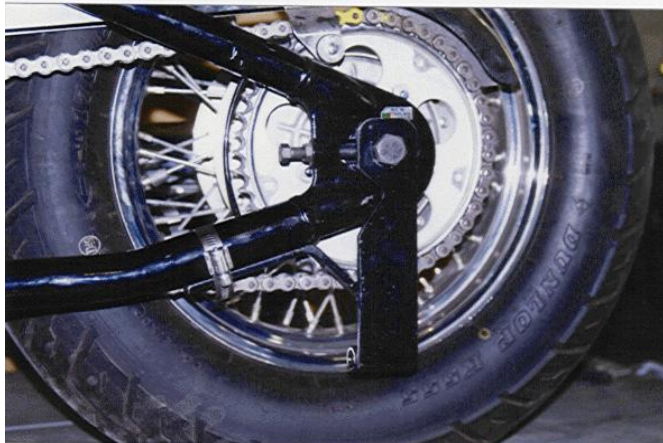


HONDA SHADOW VLX 600 BELLY BRACKET INSTALLED


RIGHT SIDE BELLY BRACKET INSTALLED

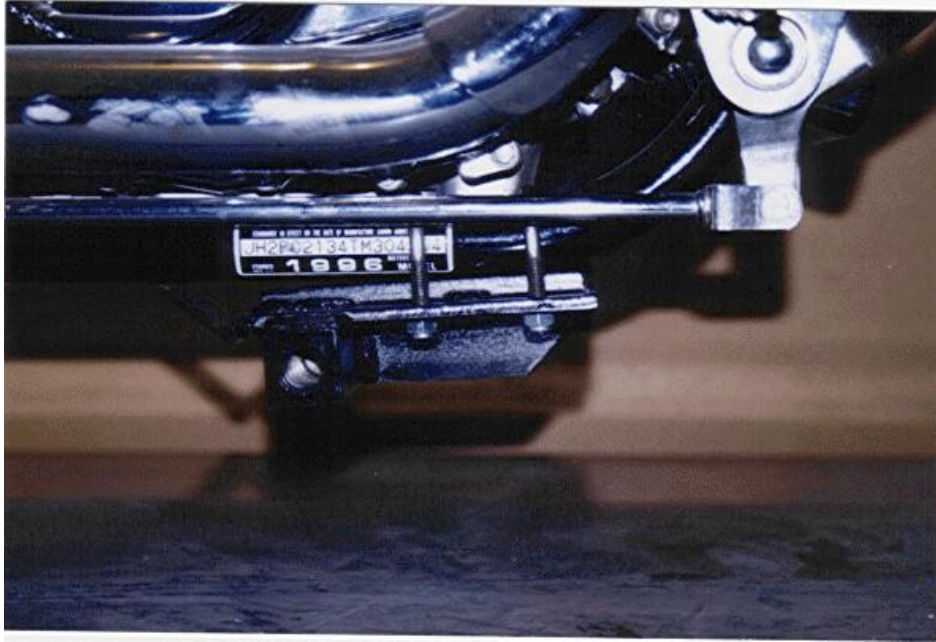

LEFT SIDE BELLY BRACKET INSTALLED

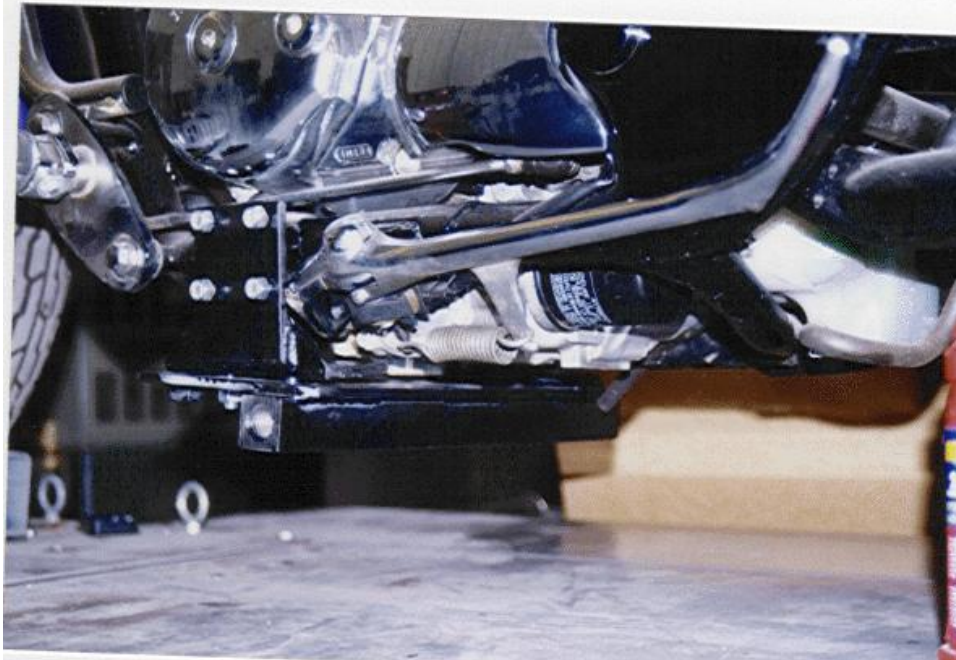

HONDA SHADOW VLX 600 DESCRIPTION OF PARTS

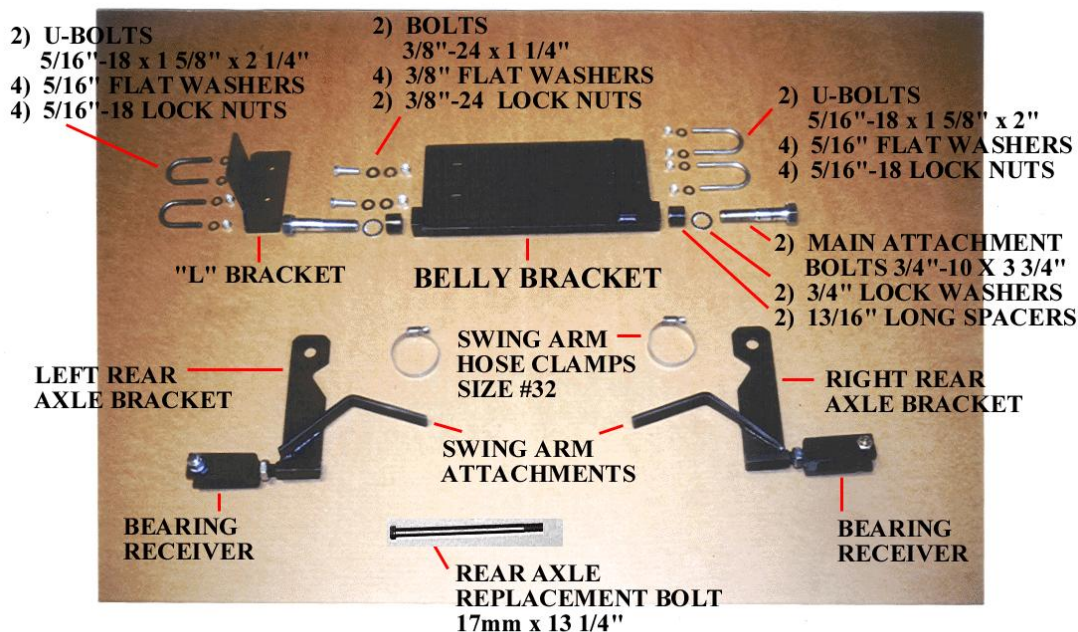


One 5 1/2" shim – not shown in picture above.

You may or may not have to use the shim. See note below.

After installing the mounting hardware and attaching the Voyager frame to the belly bracket you may need a shim to make the motorcycle stand straight up and down. The shim will go on the right side of the belly bracket.

Right side only

Install the shim in-between belly bracket and motorcycle frame.

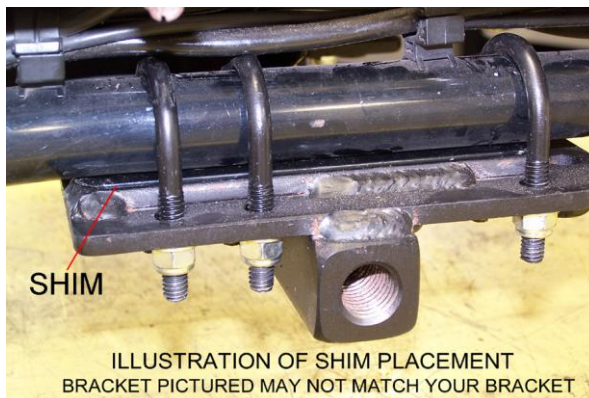

SECTION 1

INSTALLATION OF HONDA SHADOW VLX 600 MOUNTING HARDWARE

Place motorcycle on a clean flat surface. Make sure to tie down motorcycle on both sides, so that motorcycle cannot tip over while installing hardware. Installation is easier if motorcycle is in an upright position.

Disconnect negative cable from battery before beginning installation.

NOTE: The Voyager Convertible Kit was designed for a stock motorcycle from the manufacturer. Any after market products that are on a stock motorcycle may cause the installation process to not be done properly and may or may not need to be removed to be able to install the Voyager Convertible Kit completely. Be aware that your motorcycle and the same make & model as someone else's motorcycle may not have mufflers, body panels, frames, fenders and any other manufacturer parts that are attached to the motorcycle in the exact same place as yours. We at Motorcycle Tour Conversion, Inc. take that into consideration when we manufacture our parts to fit your motorcycle. Once in awhile you may need to modify your motorcycle slightly so that the Motorcycle Tour Conversion, Inc. hardware or suspension fits your motorcycle. Please call Motorcycle Tour Conversion, Inc. if you have any questions about installation with after market products or any modification of motorcycle and/or Motorcycle Tour Conversion, Inc. hardware.

A) BELLY BRACKET

- 1) Install two (2) U-bolts over the frame by the front of the motor on the right side.
- 2) Install the two (2) U-bolts around the frame on the left side and bolt the "L" bracket to the side of the frame.
- 3) Bolt the bottom section of the belly bracket to the bottom of the "L" bracket using the 2) 3/8"-24 x 1 1/4" bolts, washers, and locking nuts.
- 4) Bolt the left side to the 2 "U" bolts and tighten all bolts at this time.

SECTION 1

INSTALLATION OF HONDA SHADOW VLX 600

MOUNTING HARDWARE

B) REAR AXLE BRACKETS

- 1) Support the rear swing arm with (2) hydraulic jacks and remove the rear axle.
- 2) Install the new longer axle through the left rear axle bracket and back through the wheel.
- 3) Clamp the swing arm attachment to the swing arm using the hose clamp. (Provided with this kit.)
- 4) Right side: Install the right rear axle bracket over the axle. Replace the axle-retaining nut and clamp the swing arm attachment to the swing arm.
- 5) Torque the axle nut to manufacturers specifications.



MOTORCYCLE TOUR CONVERSION, INC.
1530 TITANIUM DRIVE
OTTAWA, IL 61350

TOLL FREE: 877-434-7901
FAX: 815-434-8980

Honda Shadow VLX 600



INSTALLATION MANUAL
US PATENT # 6,739,420

**WARRANTY WILL BE VOID IF INSTALLATION
IS NOT DONE PROPERLY**

**READ THIS MANUAL FULLY BEFORE
BEGINNING INSTALLATION OR DRIVING YOUR
MOTORCYCLE WITH THE VOYAGER KIT ATTACHED**

